


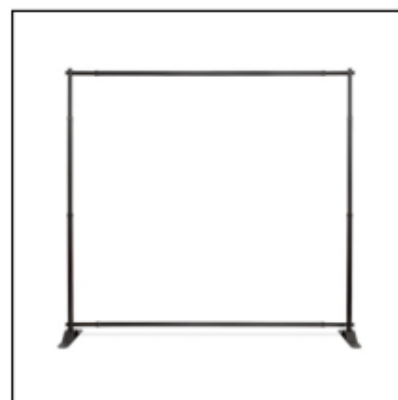


Flex Wall EXPO BASIC



- **Regolabile in altezza e larghezza con aste telescopiche**
- **Sistema leggero, facile da trasportare e spostare**
- **Un'ottima parete pubblicitaria adatta a ogni budget**




Flex Wall EXPO BASIC

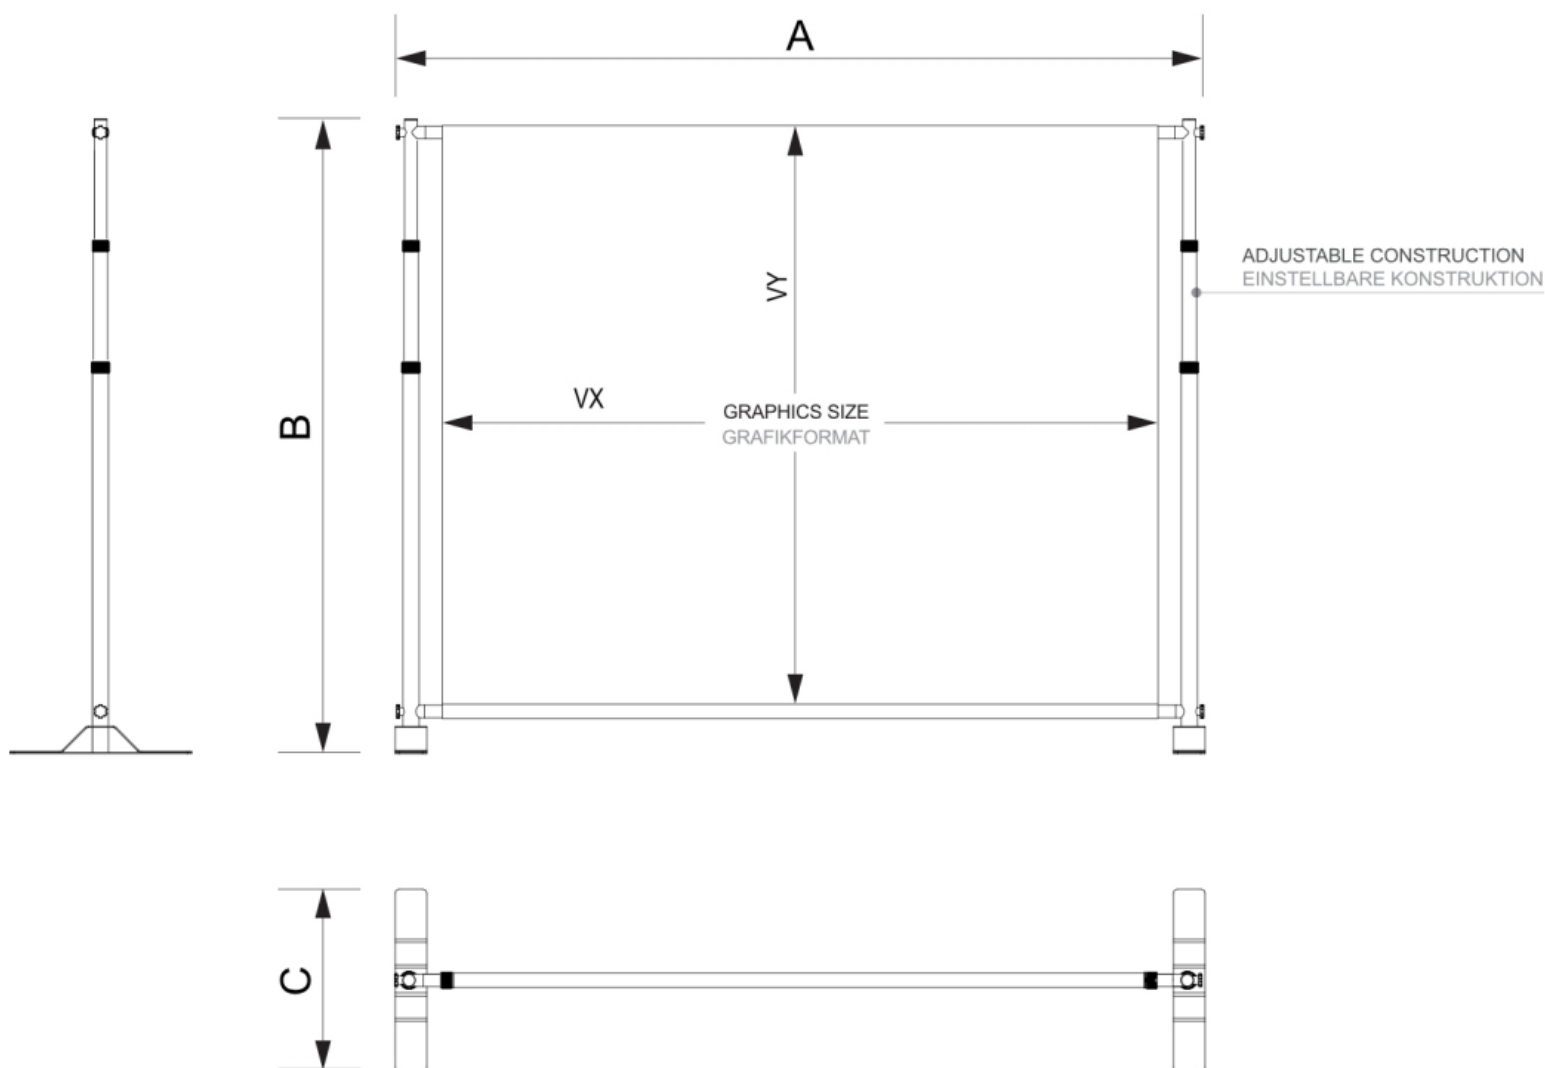



Flex Wall EXPO BASIC


- 1** Open the bag and take out all the pieces.

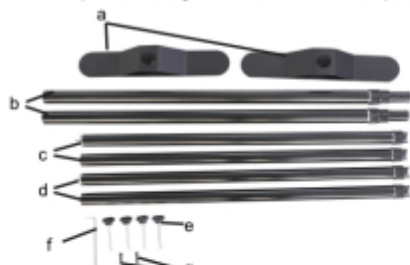


a. Feet (x2) b. Vertical pole (x2) c. Lower horizontal piece (x2)
d. Upper horizontal piece (x2) e. Screw A (x4) f. Allen wrench
g. Screw B (x2)

PS: Plastic arch degree of "d" is clearly larger than that of "c"


- 2** Insert vertical pole into the feet and fix by screw B.

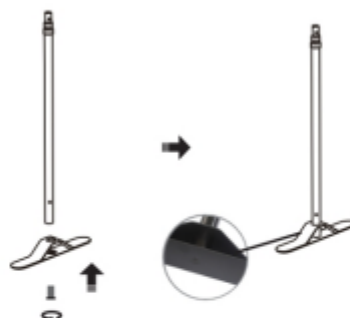


- 3** Screw on two upper horizontal pieces, and do the same to the lower horizontal pieces.

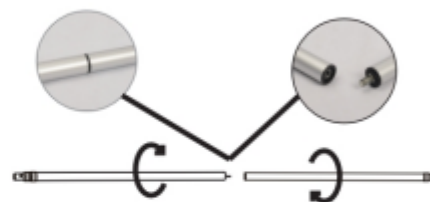


- 4** Slide the upper horizontal pole through top pole pocket on the banner.

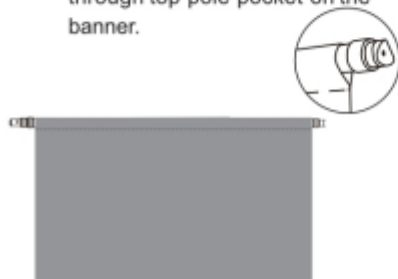


- 5** Fix upper horizontal pole by screw A.

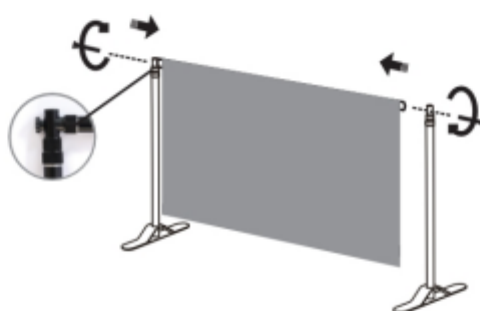

- 6** Slide the bottom horizontal pole through bottom pole pocket on the banner and fix it just like step 5.

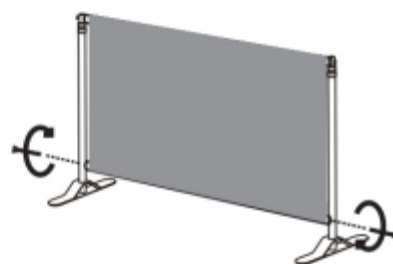

- 7** Loosen the telescoping clamps on the vertical poles, adjust the banner to be well displayed, then tighten the clamps.

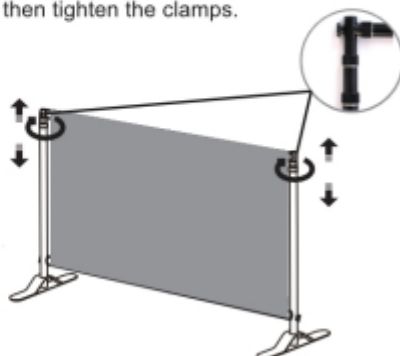

- 8** Then you have it.



Disassemble in the reverse order.

Caution: Make sure the graphic is folded neatly and save it in bag after using, to avoid wrinkle.